



How to Describe A Hose Assembly

UPDATED 4/9/2012

1ST FITTING
IS AT 0° DEG
AND AWAY FROM
YOU

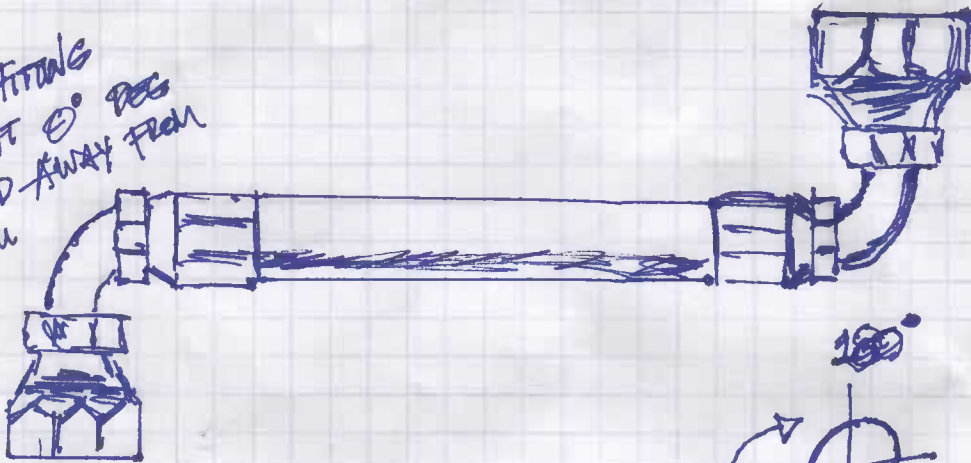

STAND BEHIND
THE 2ND
FITTING.
TURN IT
CLOCKWISE.

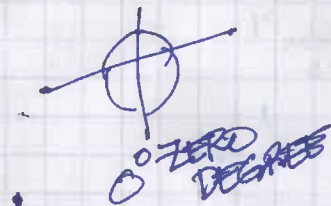

OVER ALL LENGTH OF HOSE ASSEMBLY.

NOTE: START MEASUREMENT FROM FLARE SEAT,
NOT FROM THE END OF SWIVEL NUT.

FOR ~~FLARE~~ FITTINGS, LIKE THESE, MEASURE
FROM THE OPENING, NOT AT EDGE. CODE 61
AND CODE 62 FLAT FACE FITTINGS ARE MEASURED
FROM THE FLAT SEALING SURFACE, NOT AT
END OF THE SWIVEL NUT.

CITED: AEROCORP & GATES PRODUCTS
CATALOG FROM 2001 & 2000, RESPECTIVELY.